

User Manual

LC200A Handheld L/C Meter

Inductance Capacitance Meter

Rev. 5.0
2011.01.03

Features:

High speed microcontroller's precision computation

Measuring range below 1uH and 1pF

Intellectually Shutdown in 5 minutes

Especially qualify in microwave manufacture and measuring switching power supply transformer, filter inductance and so on.

LC200A has four measuring range position:

1. C rangeCapacitance (0.01pF-10uF)
2. L rangeInductance (0.001uH-100mH)
3. Hi.L rangeBig inductance (0.001mH-100H)
4. Hi.C rangeBig capacitance (1uF-100mF)


All range position are automatic measuring ranges, it is easy to operate. Specification is as follows:



1. Technique data:

| | Item | Parameter |
|---|--------------------|------------------|
| Capacitance Accuracy | 0.01pF-1pF | 5% |
| | 1pF-1uF | 1% |
| | 1uF-10uF | 5% |
| Min Capacitance Resolution (C Range) | | 0.01pF |
| Inductance Accuracy | 0.001uH-1uH | 5% |
| | 1uH-100mH | 1% |
| Min Inductance Resolution (L Range) | | 0.001uH |
| Big Inductance | 100mH-1H | 1% |

| | | |
|---|------------------------|--|
| Accuracy | 1H-100H | 5% |
| Min Resolution of Big Inductance (Hi.L Range) | | 0.001mH |
| Big Capacitance Accuracy | 1uF-100mF | 5% |
| Min Resolution of Big Capacitance (Hi.C Range) | | 0.01uF |
| Frequency | L Range、C Range | Abt. 500kHz |
| | Hi.L Range | Abt. 500Hz |
| Display mode | | 1602 LCD |
| Display digit | | 4 |
| Power supply interface | | Mini USB & 5.5DC Socket 4 of AA Batteries |
| Supply Voltage | | 5V |

2. Picture

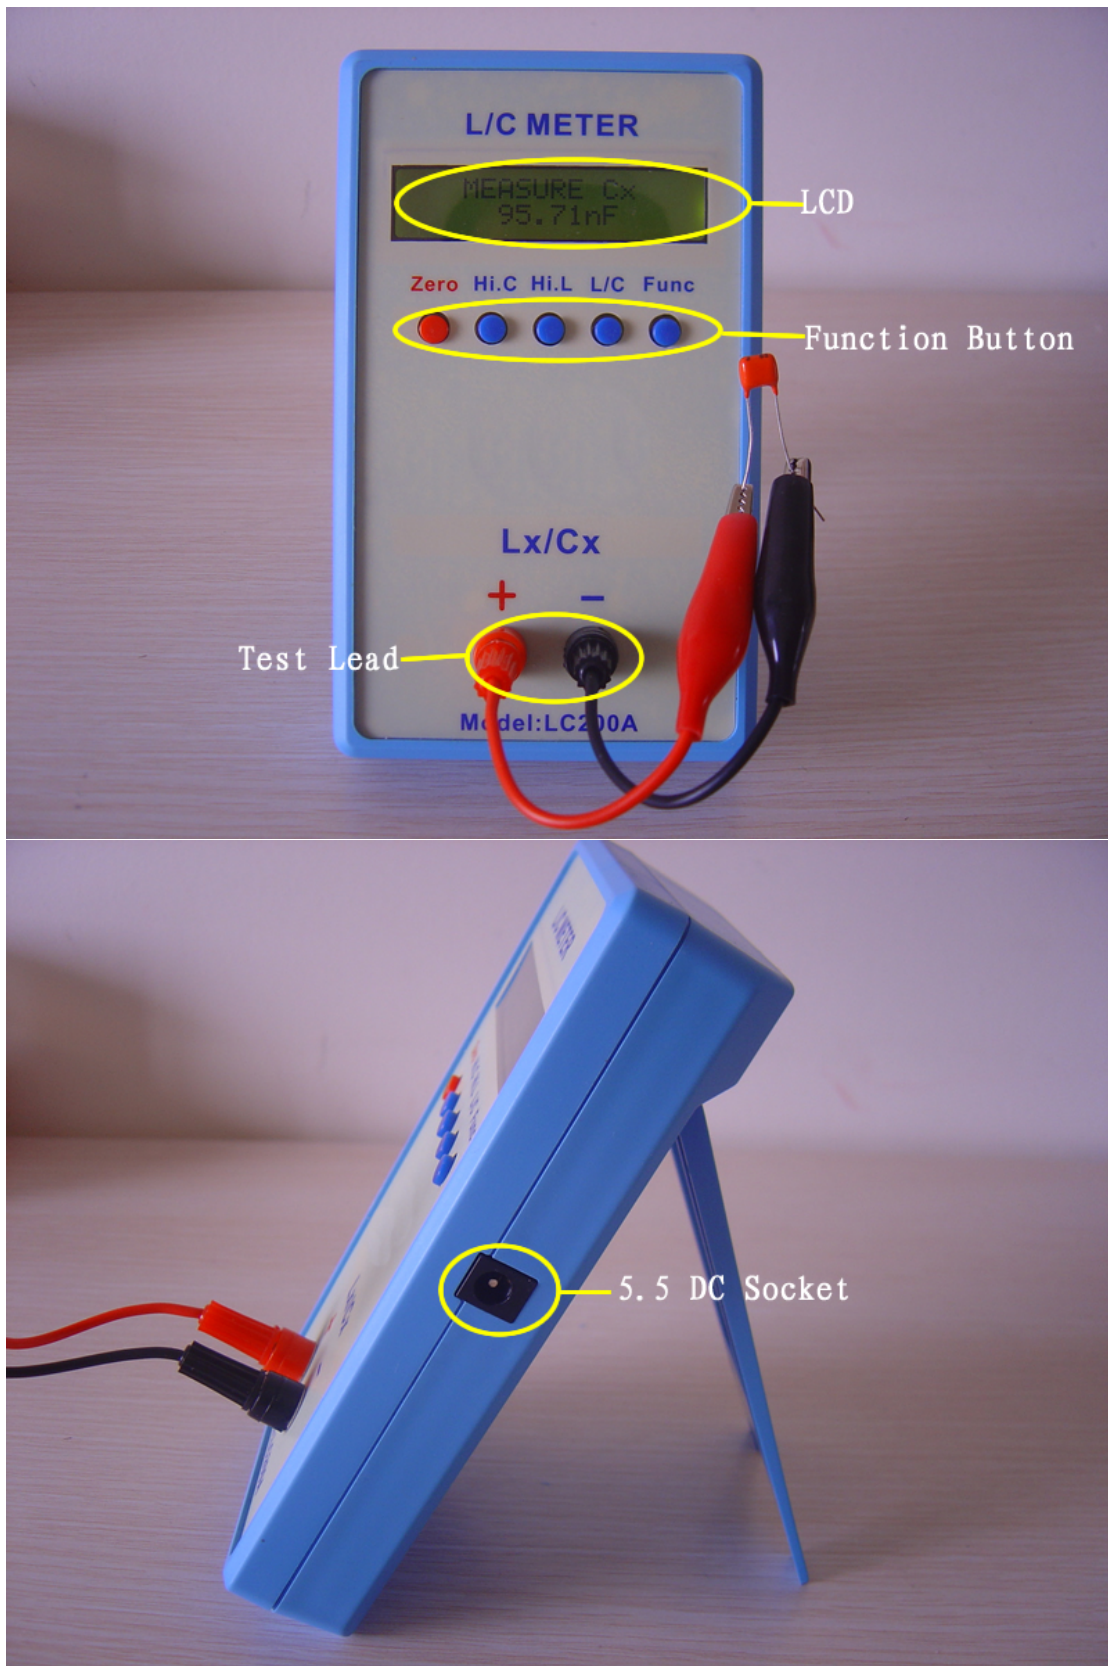

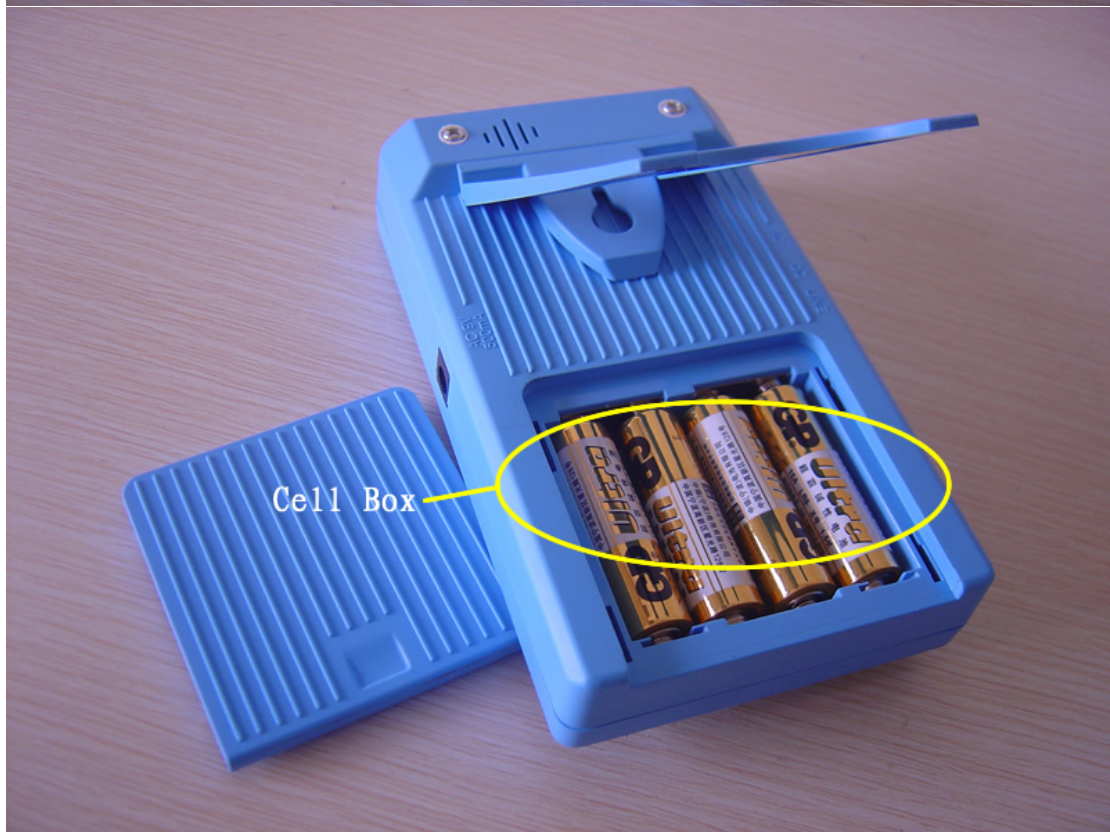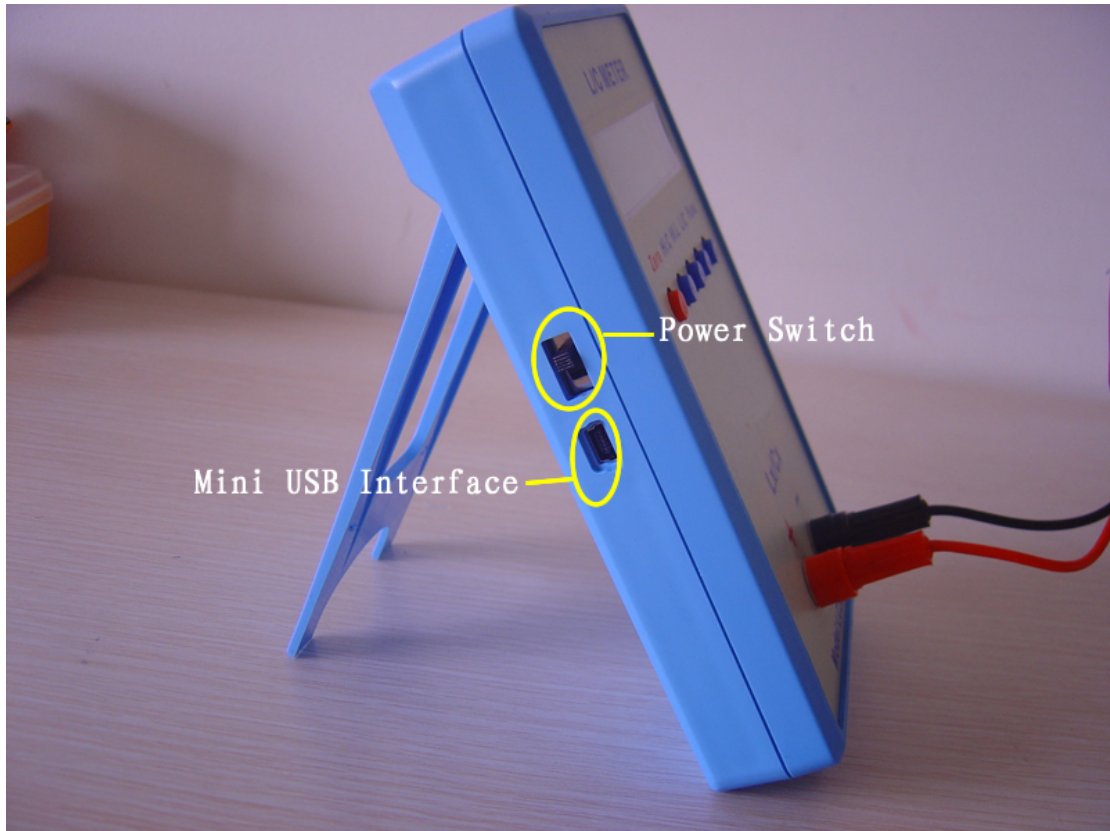

Function of five buttons:

Red: Reset

Blue: Big Capacitance Hi.C Choice (With self-locking)

Blue: Big Inductance Hi.L Choice (with self-locking)

Blue: L/C Choice (with self-locking)

Blue: Function button

Details as follows (Press "1", Release "0", "X" random)

LC200A Function table

| Hi.C | Hi.L | L/C | Corresponding function |
|----------|----------|----------|------------------------|
| 0 | 0 | 0 | Small Capacitance(C) |
| 0 | 0 | 1 | Small Inductance(L) |
| 0 | 1 | 1 | Big Inductance (Hi.L) |
| 0 | 1 | 0 | Error, please modify |
| 0 | X | X | Big Capacitance (Hi.C) |

3. Direction for use

- (1). Switch on the L/C Meter
- (2). Chose the corresponding range, inductance: Lx, capacitance: Cx, big inductance: Hi.L, big capacitance: Hi.C. Display as follows (testing lead open loop) :

Inductance: MEASURE Lx

OVER RANGE

| | |
|--|------------|
| Capacitance: MEASURE Cx | 0.00pF |
| Big inductance: MEASURE Hi.L | OVER RANGE |
| Big capacitance: MEASURE Hi.C | 0.00uF |
| Display as follows (testing lead short circuit): | |
| Big inductance: MEASURE Hi.L | 0.000mH |
| Inductance: MEASURE Lx | 0.000uH |
| Capacitance: MEASURE Cx | OVER RANGE |

(3).When testing lead open loop the measured value of capacitance is not “0”, or witch of the inductance is not “0” as the testing lead short circuit, you can reset to “0” by ways of capacitance model and inductance model, as follows:

(a) Capacitance model

Press red button as testing lead open loop, it displays “CALCULATING...”, keep pressing for one second, when “CALCULATING...OK” displayed, resetting to “0” is finished, and “0.00pF” is displayed, then capacitances can be measured.

(b) Inductance model

Press red button as testing lead short circuit, it displays “0.000uH” or “0.000mH”, and then inductances can be measured.

(4). Please press function button as results displayed, and

corresponding frequency will be displayed.

4. Note:

1. Please reset to “0” before testing a capacitance or an inductance, or errors may be appeared. Even if “0” displayed before measuring, resetting to “0” is needed.
2. At the time of resetting to “0”, when “CALCULATING...OK” appeared, please keep pressing for 2 to 3 seconds, and the parameter written to “<DATA SAVED>” will be prompted, then release.
3. Resetting to “0” is forbidden as components are being measured. If you do it, please shut down immediately and restart, then reset to “0”.
4. The time of measuring a big capacitance (above 10mF) may be more than one second, and it needs seven to eight seconds to get the measured value of the capacitance (100mF).
5. Forbid to measure a capacitance which is not discharged, otherwise it may damage the mainframe.

5. Package content

1. A LC200A L/C Meter
2. A mini USB Cable or DC5V adaptor